


How to paint a garden decoration

WAGNER's HVLP fine spray system enables all kinds of decoration ideas for your garden to come true. We will demonstrate this based on an example of a wooden garden flower. You just need the W550 fine spray system.

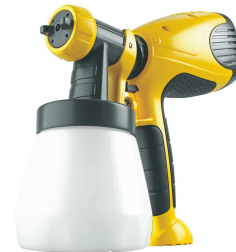

You will need the following materials to make the garden flower:

- Wood template about 11 cm width
- Iron rod about 6 mm in diameter and length about one metre. Alternatively you can use a cane or pole.
- 2 different colours (we used 2 in 1 coloured paint by Alpina)

This is how to do it:

1. Print out the template in its original size (check out our download options under Instructions) or enlarge it to the desired size and then cut it out.
2. Have the template cut by a carpenter and do it yourself using a jig saw. Sand down any sharp edges. Drill a hole about 5 cm into the bottom of the template, or depending on the type of cane you have chosen, into the middle of the flower or on the narrow side at the edge. It should be the same diameter as the cane.
3. Use a sander to sand it down until the coating has a matt finish (but make sure you do not take the coating off completely). Wipe it down well. The surface should be dry and free of grease and dust.
4. All typically available water-based and solve-based paints, which are suitable for spraying, can be used. The clearance between the grooves of the mixer indicates a dilution of 10%. Information about thinning can be found on all tins of paint by different manufacturers, labelled "Perfect Spray".

5. Next, begin with the WAGNER fine-spray system to spray the edges followed by the entire area, making sure you keep an even distance. You should also take the spray beyond the edges.
6. Allow the paint to dry well in accordance with the manufacturer's specifications.
7. Thin the paint for the point on the flower, mix it and then carry out a test spray. At a distance of about 10 cm point the device to the middle of the flower and press the trigger briefly. Allow to dry well.
8. Put the cane into the drilled hole and secure it with glue. To ensure that the flower stands firmly, the cane should be pushed about 10 cm into the ground.



More instructions can be found at www.wagner-group.com/service