

Instructions on how to spray walls with the W 985 E

With the HVLP fine-spraying WAGNER devices you will obtain especially smooth and even surfaces. For example, you can use them to coat walls and ceilings. These instructions are based on the WallPerfect W 985 E fine-spray system.



1. Clear the room and cover the floors and furniture. Use cardboard, cover fleece and/or masking tape. Mask the doors and corners. Make sure the masking tape sticks well.
2. Connect up the spray lance and grip.
3. Connect the spray head to the end of the lance by clicking it into place.
4. Insert the pull-wire into the holding fixture and turn it until you have the right amount of tension.



5. Press the paint hose into the front slot.
6. Make sure the entire length is taut from where it leaves the slot and then press it into the groove.

7. Insert the thin hose at the grip end.



8. Attach the bigger black hose to the grip.


9. The protective cap is affixed to the front of the lance.

10. The hoses also need to be attached to the device.



11. The paint has to be thinned and mixed.

12. To fill the device, set the rotary knob to "Clean" and dip the suction hose into the paint container.

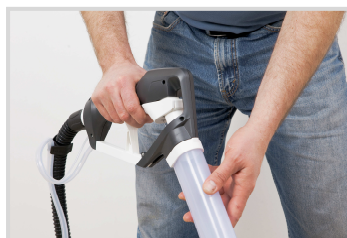

13. Depress the grip and keep the spray lance held over the paint container. Keep the grip depressed until paint emerges at the front.

14. Once the entire hose is full of paint, move the knob from "Clean" to "On". Now make sure that the lance is no longer pointing towards the paint container.

15. Now do a test spray on to a piece of cardboard or a test poster.
16. First of all spray the corners and edges with paint. Afterwards spray the surfaces making sure you keep to an even distance (approx. 10-20 centimetres) from the surface



More instructions can be found at www.wagner-group.com/service.